


## Interaction Description of Battery Module Management Unit (BMMU)

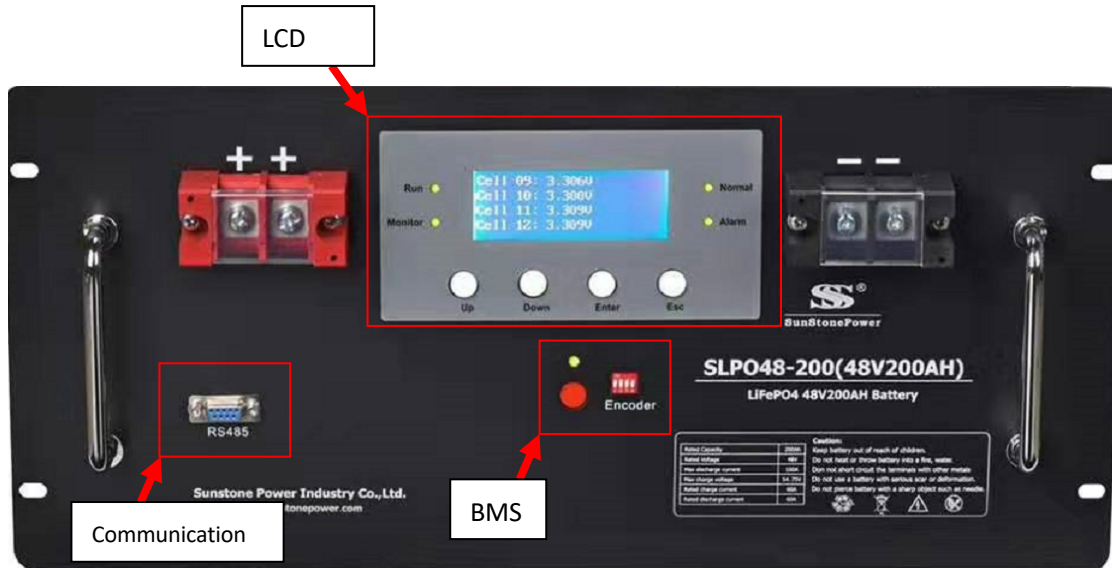

The human-computer interaction of main control board is as follows :

Item	Button	Function	Remark			
LCD	Up	Page up	显示屏不能配置参数，只有显示功能 Parameter could not be set by LCD button, LCD only show the function			
	Down	Page Down				
	Enter	Confirm				
	Esc	Exit, Return to homepage				
	Run(Light)	Running indication				
	Monitor(Light)	Monitor communication status indication				
	Normal(Light)	Normal				
	Alarm(Light)	Alarm				
BMS	Light Indicator	Normal: Green light Alarm: Yellow light Faulty: Red light	If wake-up fails, wait 10 seconds to wake up again. If the modular is in sleep mode due to low voltage, just need to charge it to wake it up.			
	Red Button	1.Under running mode: Short press: invalid Long press:3~6s: enter sleep mode (need to disconnection from the bus)  2.Under sleep mode: Short press: invalid Long press:3~6s: wake up				
	Encoder	Setting the IP address of the modular				
		1	2	3	4	All the button on the "OFF"

Item	Button	Function				Remark	
		OFF	OFF	OFF	OFF	Invalid address code	position,then the address is invalid.
		OFF	OFF	OFF	ON	Address 1	
		OFF	OFF	ON	OFF	Address 2	
		OFF	OFF	ON	ON	Address 3	
		OFF	ON	OFF	OFF	Address 4	
		OFF	ON	OFF	ON	Address 5	
		OFF	ON	ON	OFF	Address 6	
		OFF	ON	ON	ON	Address 7	
		ON	OFF	OFF	OFF	Address 8	
		ON	OFF	OFF	ON	Address 9	
		ON	OFF	ON	OFF	Address 10	
		ON	OFF	ON	ON	Address 11	
		ON	ON	OFF	OFF	Address 12	
		ON	ON	OFF	ON	Address 13	
		ON	ON	ON	OFF	Address 14	
		ON	ON	ON	ON	Address 15	
Communication	RS485						3 is A, 5 is B